



Safety Warning:

Read all instructions and warnings before attempting to use this product.
Failure to comply can result in damage, injury, or possibly death.
Consult the vehicle's service manual before using this product for specific removal instructions.

- Stay alert! Be aware of your surroundings and use common sense when operating this tool.
 - Inspect tool for damage prior to using; do not use if tool is in unsafe condition.
- Always use safety equipment. Approved face and eye protection must be worn in the work area at all times.
 - Keep hair, clothing, jewelry, and gloves away from any moving parts at all times.

Operating Instructions:

1. Place bearing cup against the magnetic side of installer.
2. Insert the second bearing cup into driveline.
3. Align the installer over both bearing cups.
4. Turn the forcing screw by hand or with an impact wrench.
5. Ensure that the U-joint cross and bearing cup are aligned.
6. Both of the bearing cups will be pressed in at the same time.
7. Repeat steps 1-6 on remaining bearing cups.

Note: Tool may have flipped around to reach correct bearing cup depth to install retaining clip.

Parts Breakdown:



Part Number	Description	Qty.
20201	C-Frame	1
20202	Forcing Screw	1
20203	Flat Press Adapter	1
20204	O-Ring	1