
38700 - Harmonic Balancer Installer Replacement Parts List

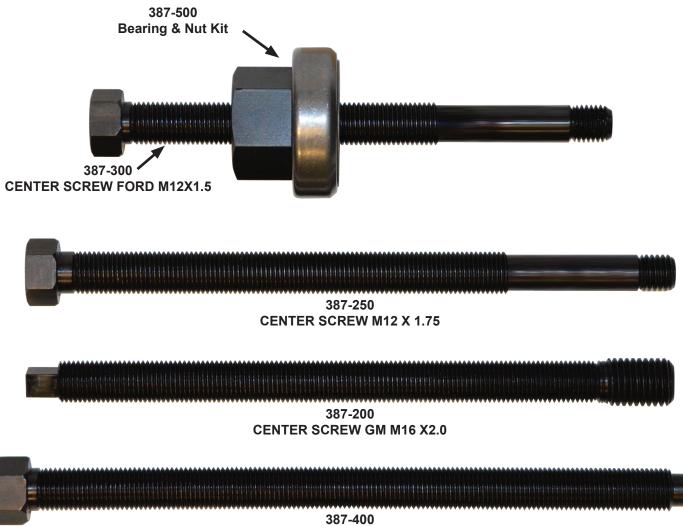

387-400 CENTER SCREW MOPAR/ GM M14X1.5

38700 - Harmonic Balancer Installer Applications

The Long Reach Balancer / Pulley Installer is a kit for installing harmonic balancer pulleys on many popular late model Ford, GM, Dodge and Chrysler vehicles with V6 and V8 engines that have recessed threads for the crank pulley bolt or utilize an underdrive pulley or both.

Traditional type balancer pulley installers will not work in many of these applications.

This convenient kit features four high quality, long-reach threaded adapters and a universal nut that enables technicians install these pulleys with ease.

Kit includes:

M16 x 2.0 - GM M14 x 1.5 - Dodge, Chrysler, Jeep M12 x 1.75 - Dodge, Chrysler, Jeep M12 x 1.5 - Ford